

"Apollo"

PEX Ring Removal Tool

Sizes: 3/8", 1/2", 5/8", 3/4", 1"

The Apollo PEX Ring Removal Tool is designed for use on all PEX Rings and Cinch Clamps.

MAKES FITTINGS REUSABLE

Operating Instructions

PEX Clamp Ring Removal

Step 1:

Set Dial on Tool to Desired Ring Cutting Size.

Step 2:

Cut PEX pipe close to fitting, and insert small jaw inside fitting, and compress handle, forcing cutter through crimp ring.

Step 3:

Reposition cutter to other side of crimp ring, and compress handle, forcing the crimp ring open.

Step 4:

Remove PEX Ring from Pipe.

Step 5:

Re-insert Removal Tool into fitting, fully close the handles, forcing the cutting jaw into PEX pipe.

Step 6:

Repeat in several positions to free PEX pipe for removal.


Cinch Clamp Removal

Step 1:

Place cinch ring nub between tool jaws with blade at top, compress handles, and repeat until ring releases.

Step 2:

Remove ring and go to step five in PEX Clamp Ring Removal to clear tubing from fitting.

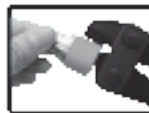

Standards



Apollo PEX Ring Removal Tools are manufactured in accordance with American Society for Testing and Materials (ASTM) F-1807.

"Apollo"
by Conbraco Industries, Inc.

Apollo product specifications in U.S. customary units and metric are approximate and are provided for reference only. For precise measurements, please contact Apollo Technical Service. Apollo reserves the right to change or modify product design, construction, specifications, or materials without prior notice and without incurring any obligation to make such changes and modifications on Apollo products previously or subsequently sold.